




INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
INSTRUCTIONS FOR ASSEMBLY
INSTRUCCIONES DE MONTAJE

1325-2 + 1325TN WIN-FOLD3®







MADE IN FRANCE
SINCE 1920

VOLETS PLIANTS : VERROUILLAGE
FALTSCHIEBELÄDEN : BLOCKIERUNG
FOLDING SLIDING SHUTTERS : LOCKING
CONTRA VENTANA PLEGABLE : CIERRE

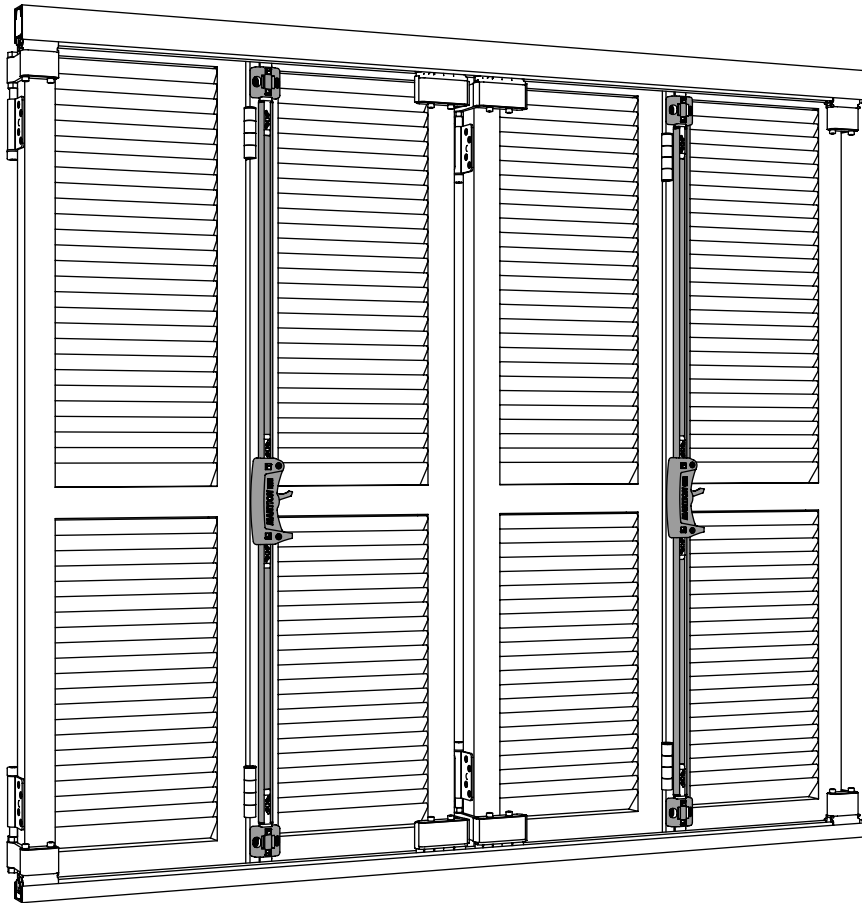

1325-2

1325TN

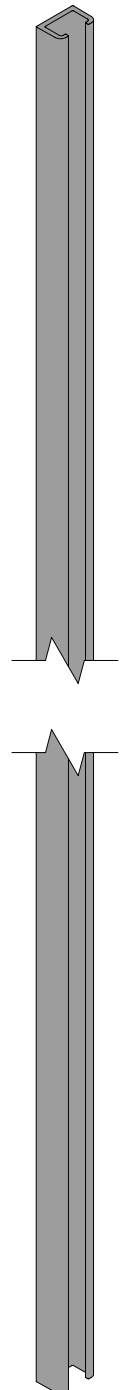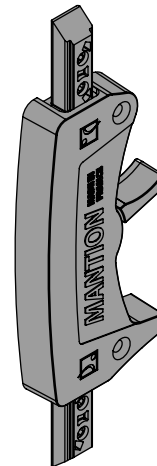



SLIDSOFT®



calcule instantanément le détail des
composants (quantitatif, dimensionnement
...)

listet sofort die benötigten Artikel auf
list instantaneoulsy the required items
Calcula al momento el despiece detallado

www.mantion.com

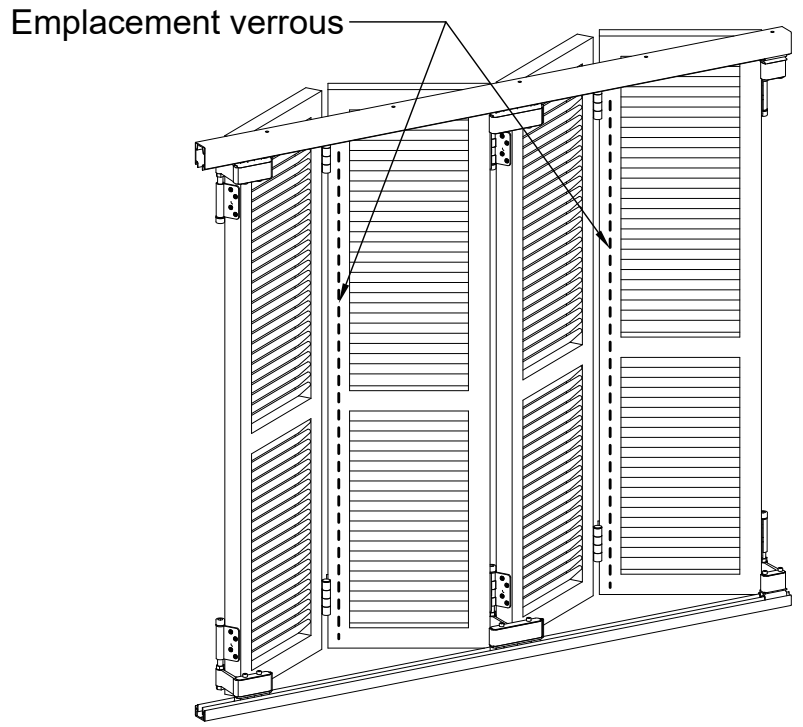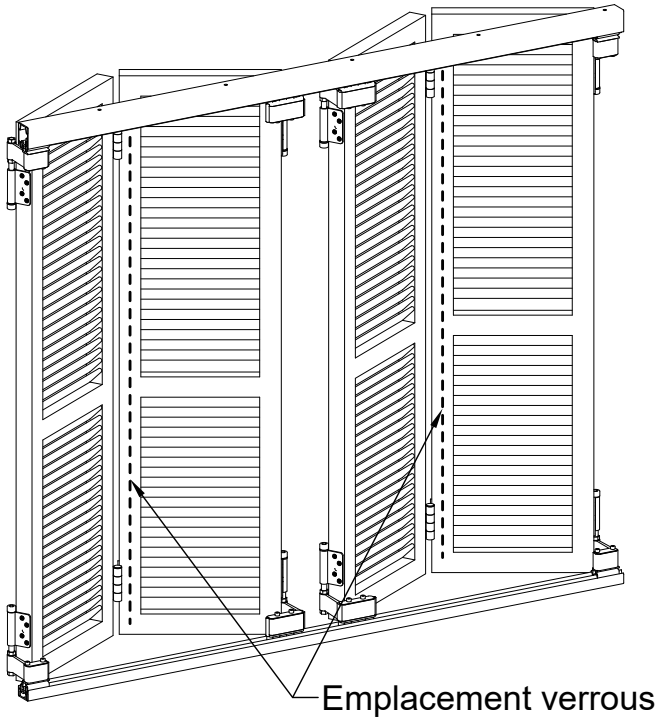


1

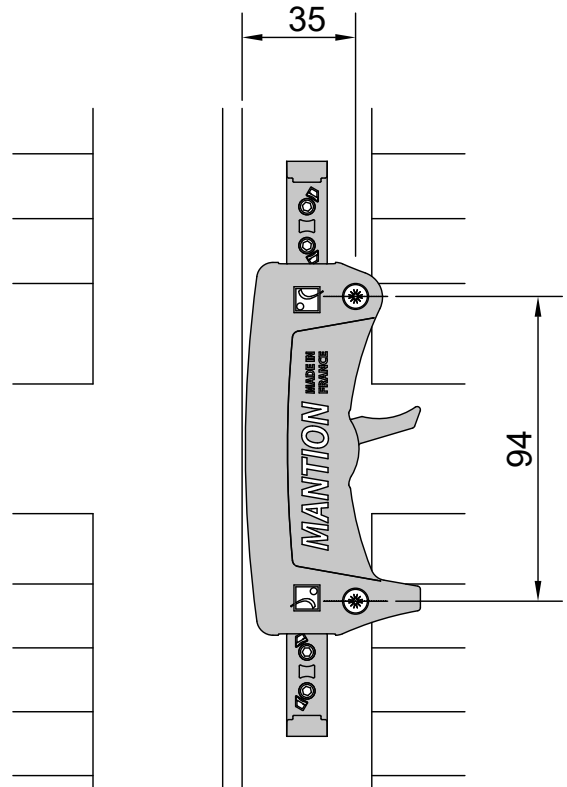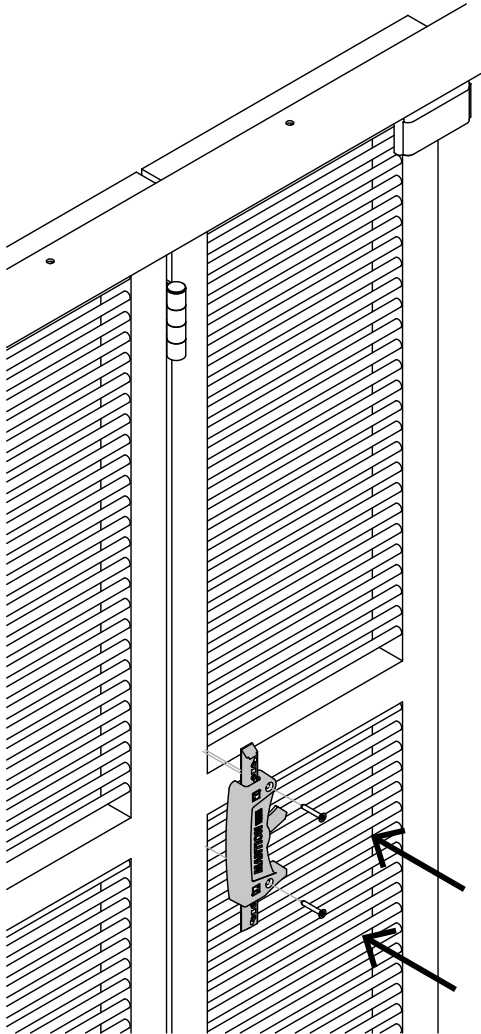


1325TN


2.1

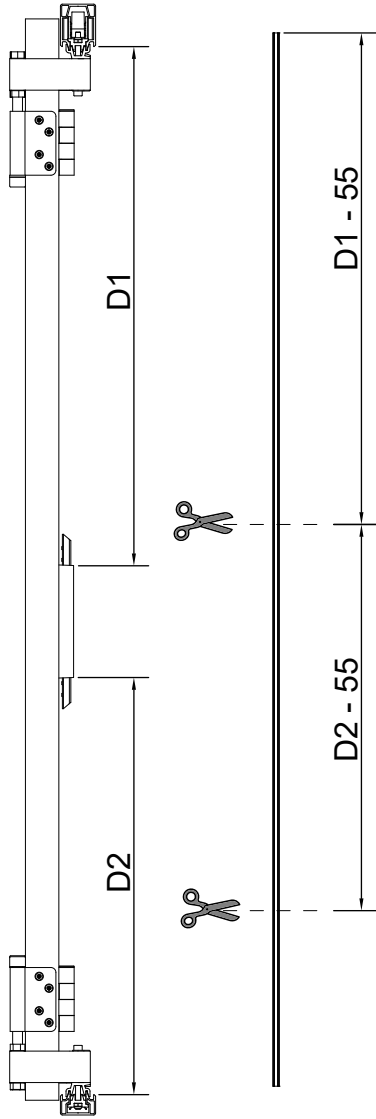


3.1



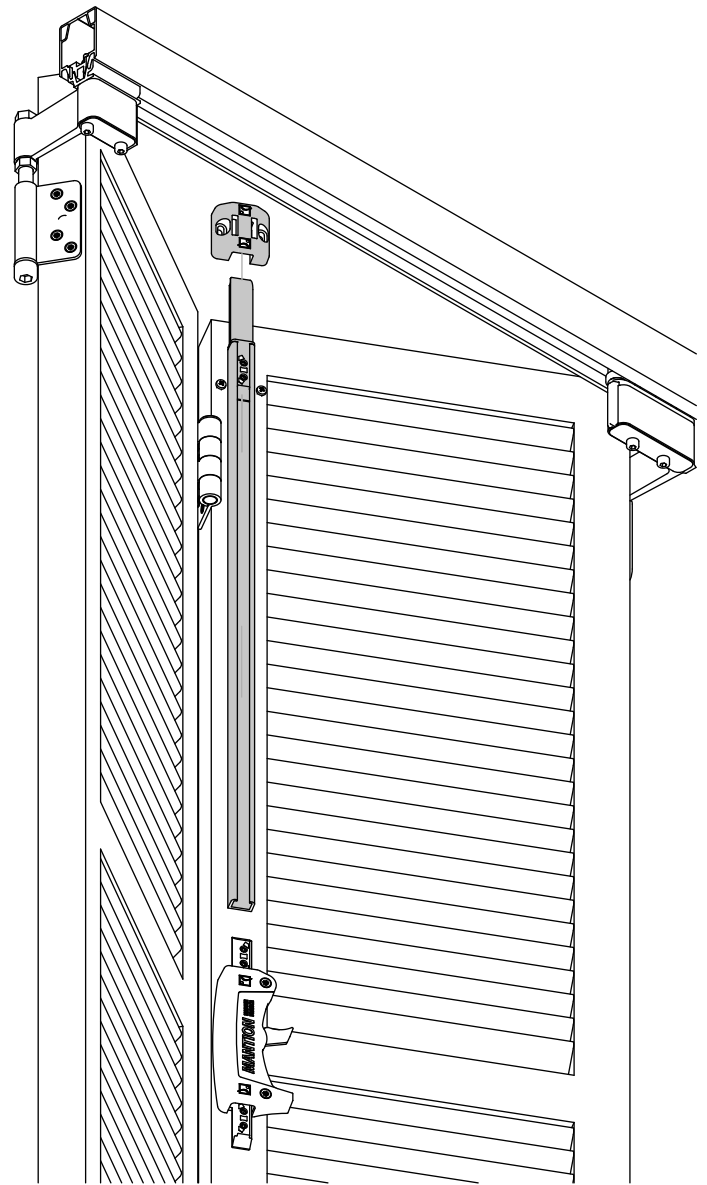


2.b

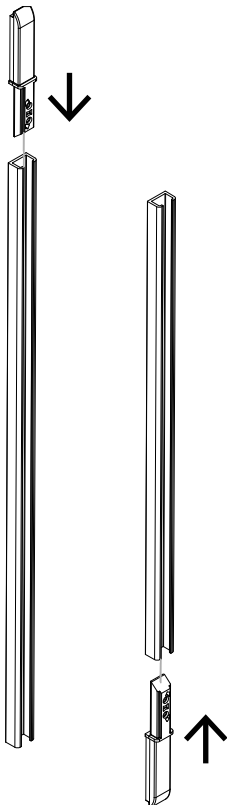


3.2

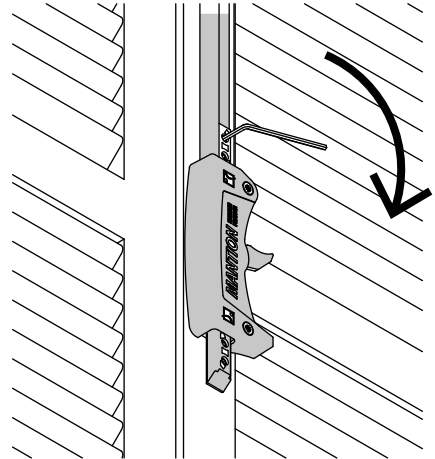


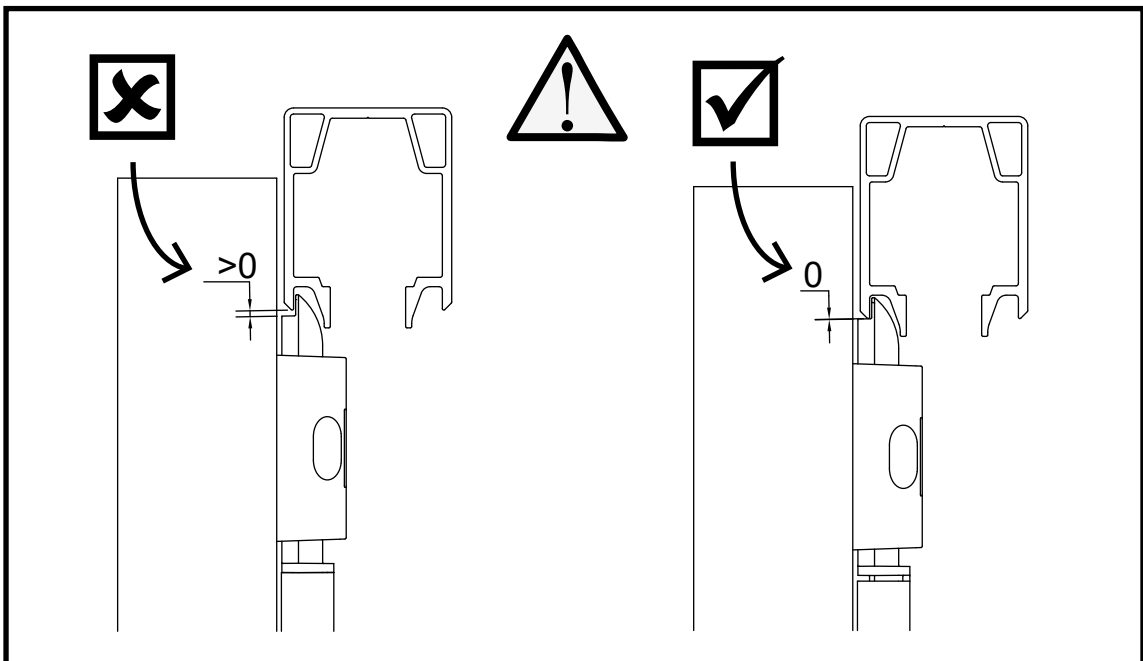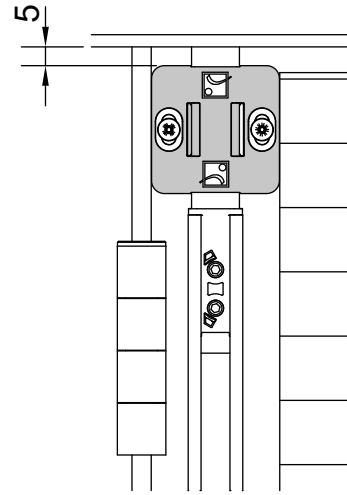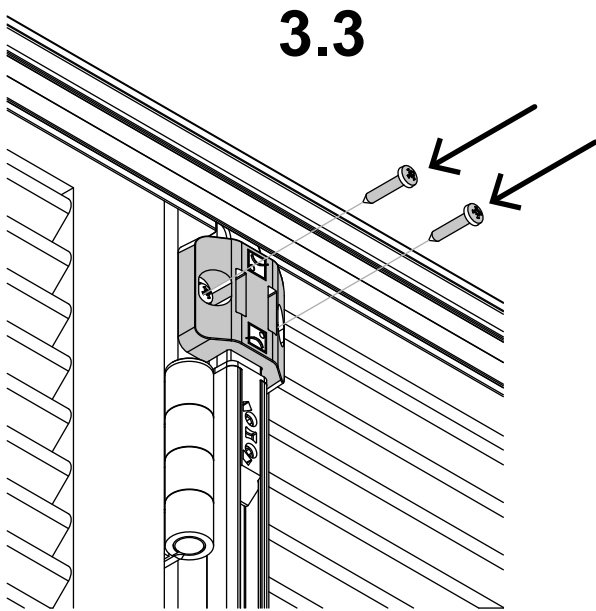

4.1

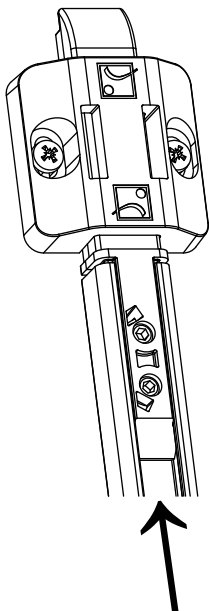

4.2

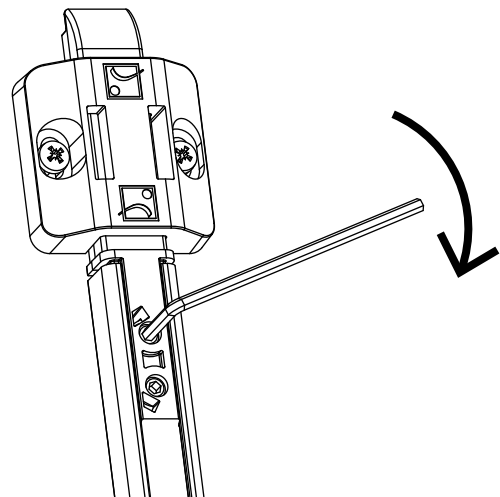

Repetez les étapes de 3.1 à 4.2 pour le verrouillage inférieur et pour tous les verrous du volet